



Scheme No B001 : Last Updated Nov 2010
 © Free-Way 2018




MANUFACTURED IN ENGLAND BY NSF CONTROLS LTD

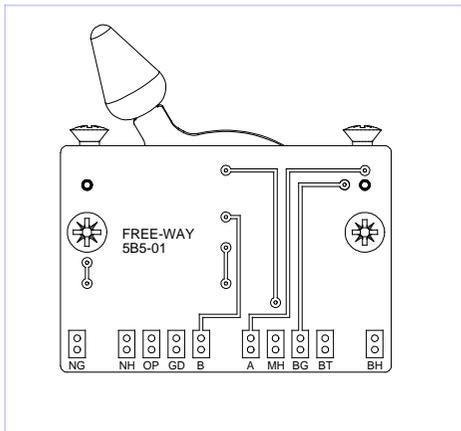


REVERSE VIEW OF PICKUPS, SWITCH AND POTENTIOMETERS.

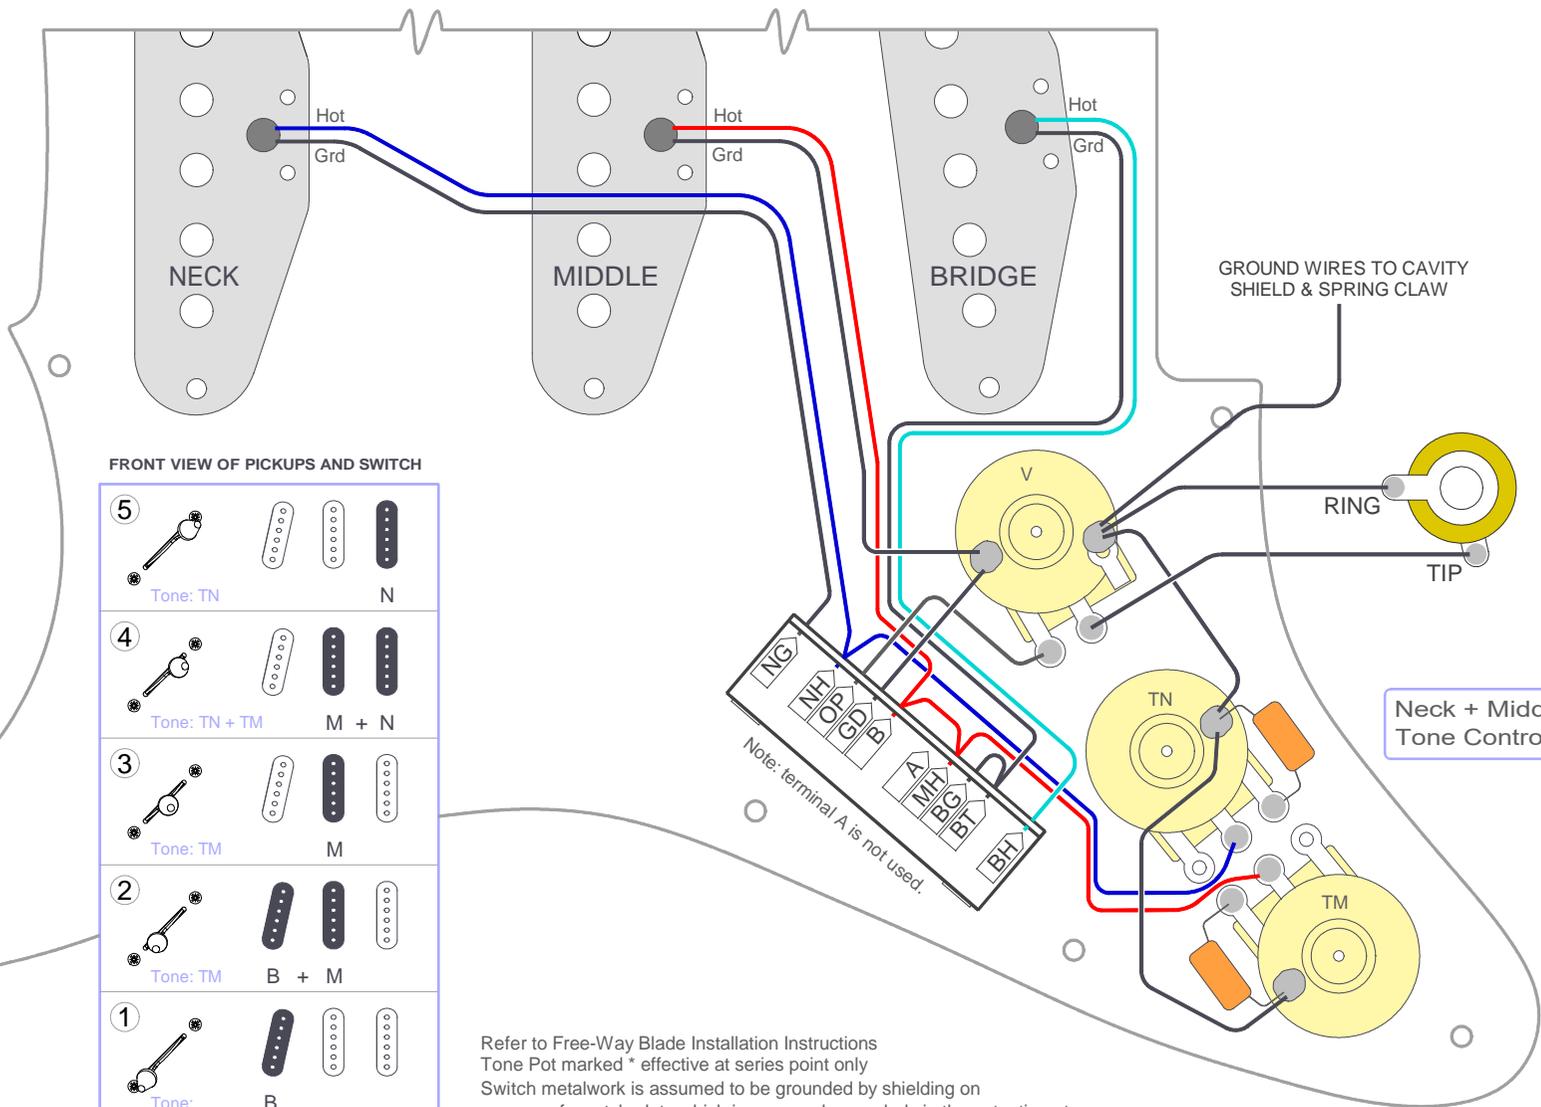

FRONT VIEW OF PICKUPS AND SWITCH

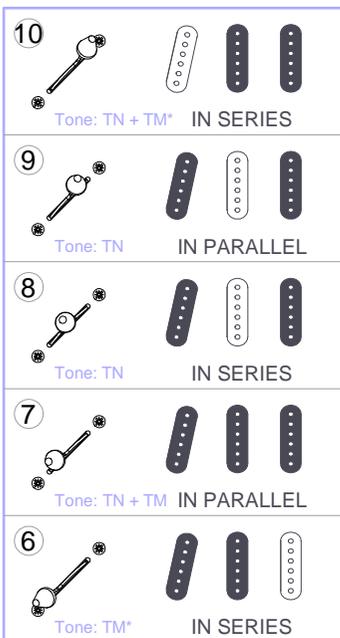

FRONT VIEW OF PICKUPS AND SWITCH

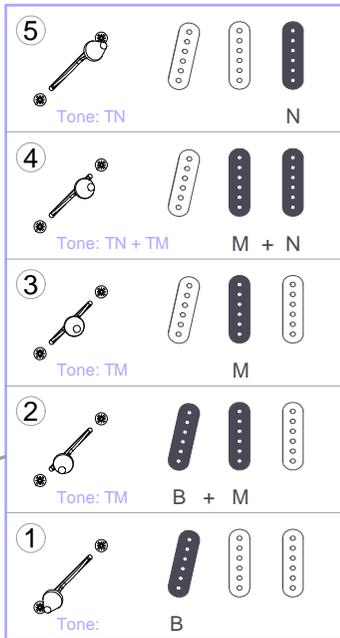

Note: terminal A is not used.

Refer to Free-Way Blade Installation Instructions
 Tone Pot marked * effective at series point only
 Switch metalwork is assumed to be grounded by shielding on reverse of scratch-plate which is assumed grounded via the potentiometers

Model No:- 5B5-01



SSS Parallel Series Scheme A 1V/2T



Scheme No B003 : Last Updated Nov 2020
 © Free-Way 2018

FREE-WAY SWITCH


www.freewayswitch.com

MANUFACTURED IN ENGLAND BY NSF CONTROLS LTD


REVERSE VIEW OF PICKUPS, SWITCH AND POTENTIOMETERS.

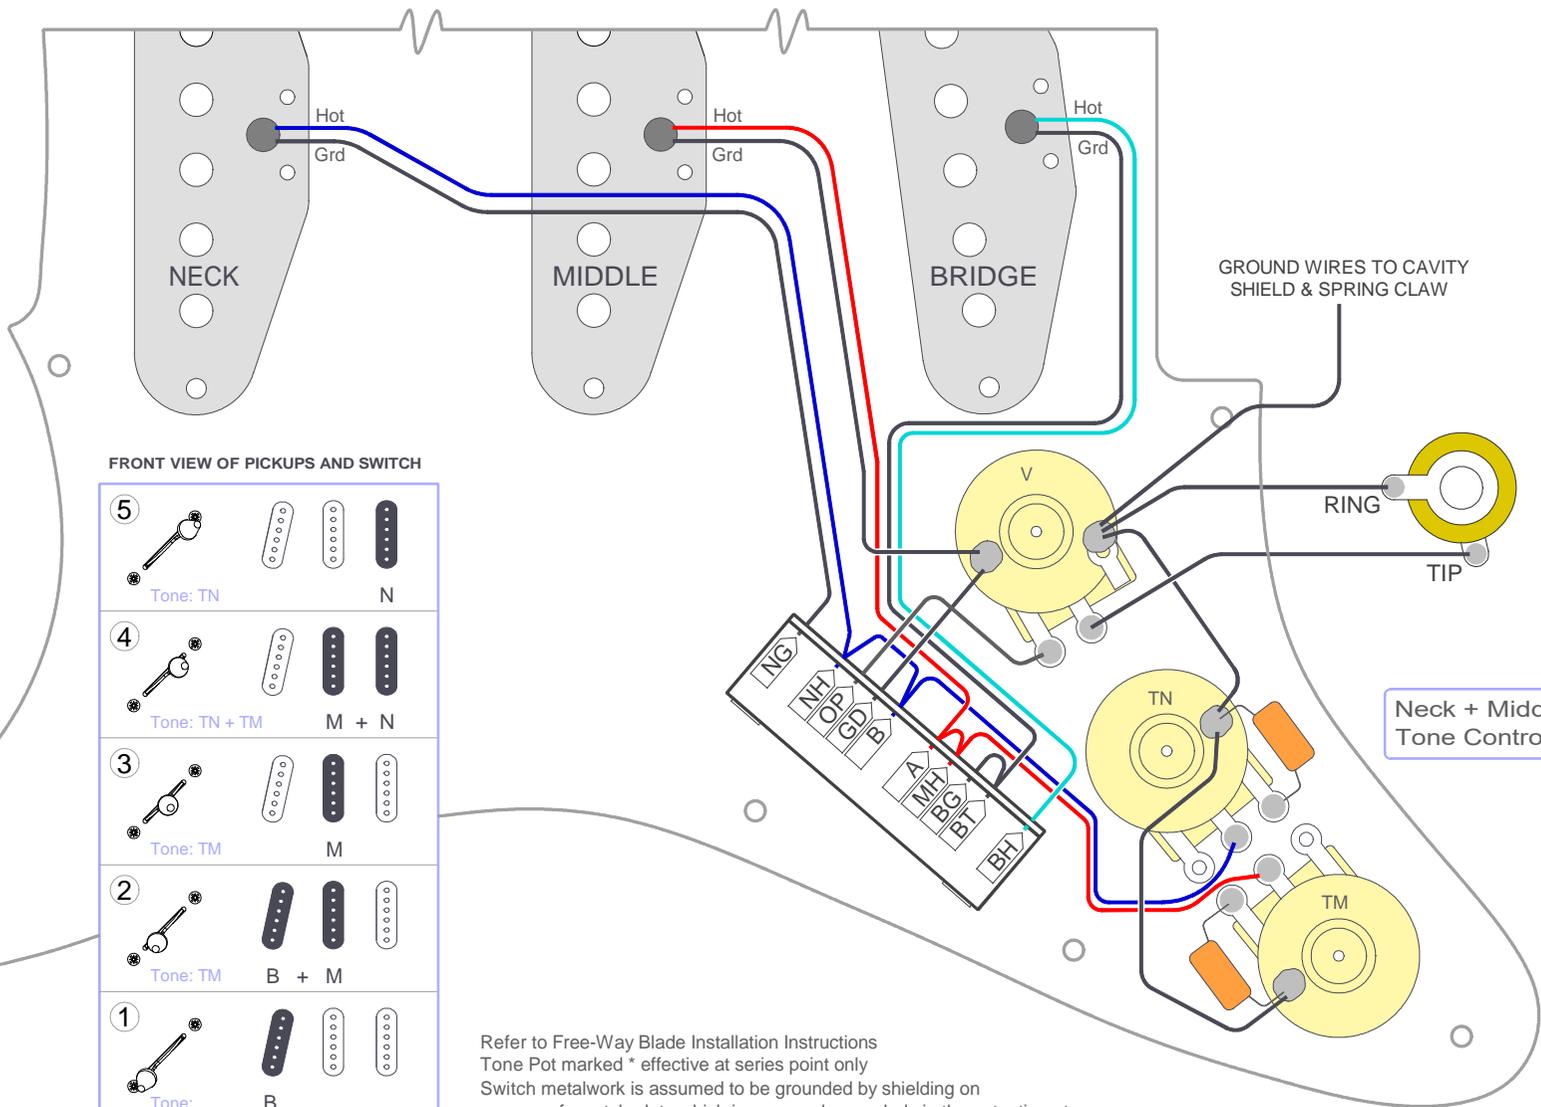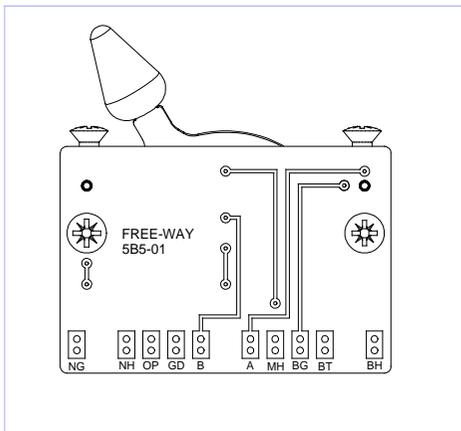

FRONT VIEW OF PICKUPS AND SWITCH

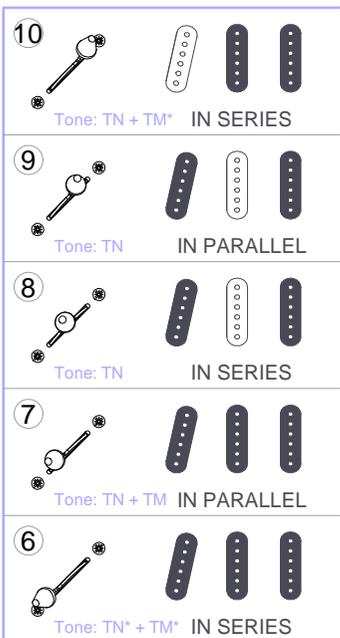

FRONT VIEW OF PICKUPS AND SWITCH

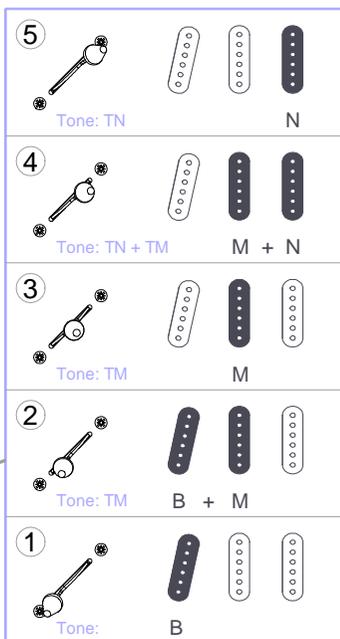

Refer to Free-Way Blade Installation Instructions
 Tone Pot marked * effective at series point only
 Switch metalwork is assumed to be grounded by shielding on reverse of scratch-plate which is assumed grounded via the potentiometers

Model No:- 5B5-01




SSS Parallel Series Scheme B 1V/2T

Scheme No B005 : Last Updated Nov 2020
 © Free-Way 2018


FREE-WAY SWITCH

www.freewayswitch.com


MANUFACTURED IN ENGLAND BY NSF CONTROLS LTD

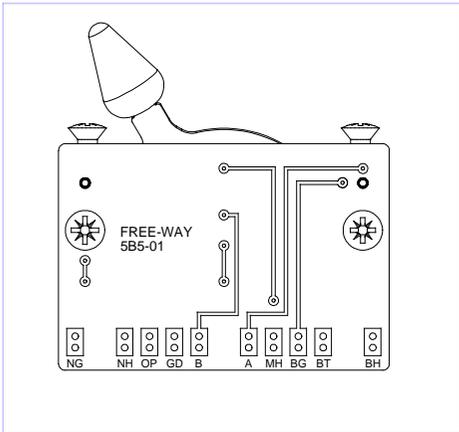


REVERSE VIEW OF PICKUPS, SWITCH AND POTENTIOMETERS.

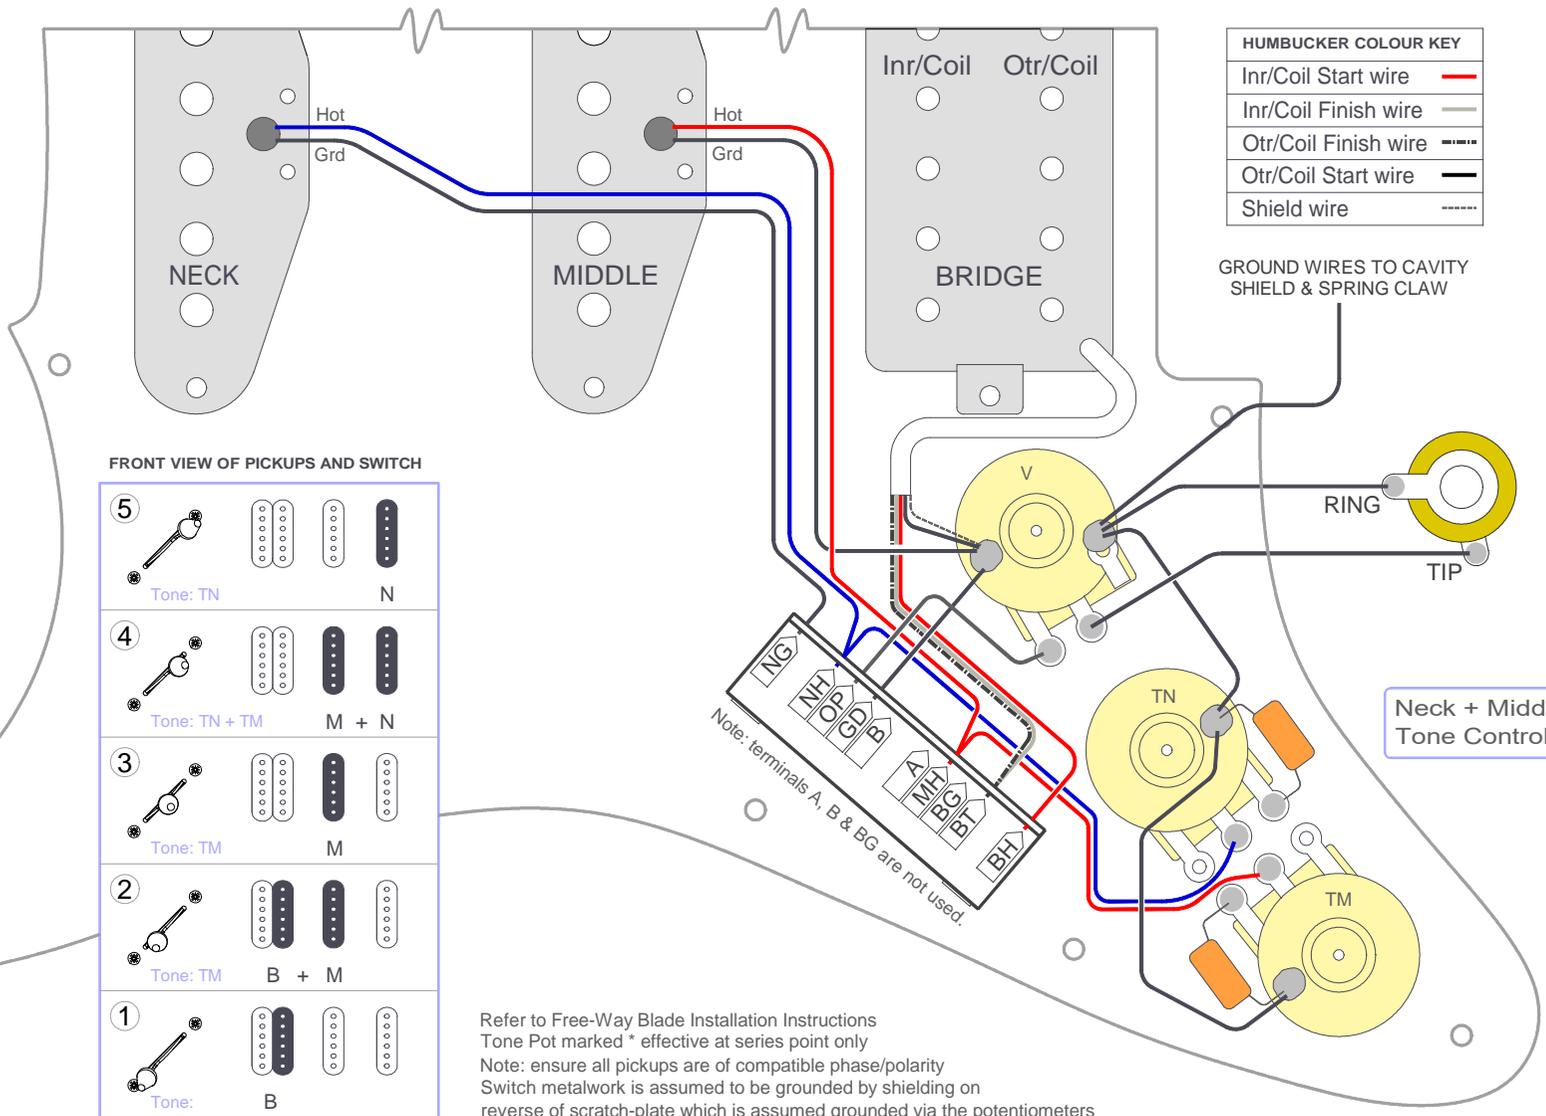

FRONT VIEW OF PICKUPS AND SWITCH

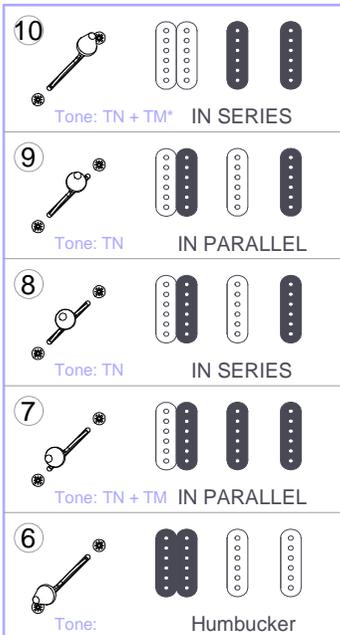

FRONT VIEW OF PICKUPS AND SWITCH

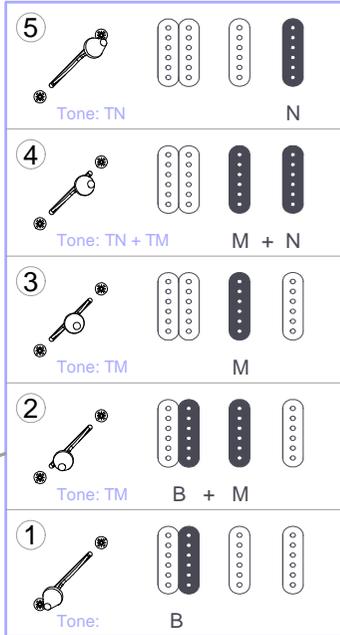

Refer to Free-Way Blade Installation Instructions
 Tone Pot marked * effective at series point only
 Note: ensure all pickups are of compatible phase/polarity
 Switch metalwork is assumed to be grounded by shielding on reverse of scratch-plate which is assumed grounded via the potentiometers

Model No:- 5B5-01



HSS Parallel Series Scheme 1V/2T